

VEIKK

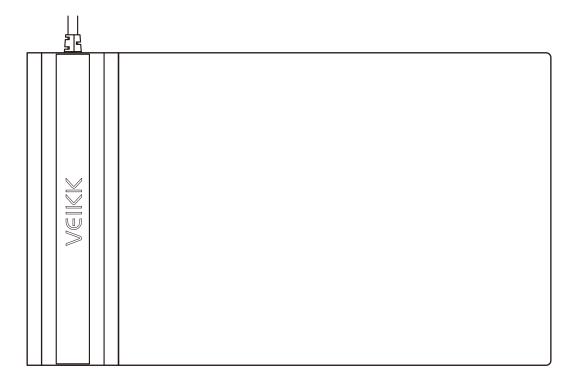

User Manual

S640

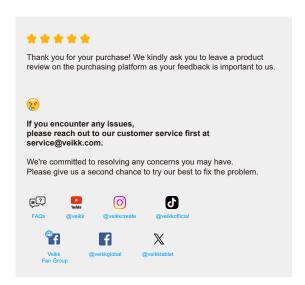


Precautions

- 1. Please read this manual carefully and keep it well for future reference.
- 2. Before cleaning the tablet, please unplug the USB cable and wipe it with a soft damp cloth, and don't use any kind of detergents.
- 3. Do not place the tablet near water sources such as bathtub, wash basin, sinks, washing machine, damp basement, swimming pool, etc.
- 4. Do not place this tablet on an unstable surface.
- 5. Do not step or place heavy objects on this tablet.
- 6. Do not place the tablet at a height for children to reach easily in order to avoid danger. Make sure that a child does not put the pen or pen tip in his/her mouth.
- 7. Do not place the tablet and digital pen close to magnetic fields.
- 8. To protect your tablet, please unplug the USB cable when it is not in use.
- 9. Please contact customer service if the tablet has a breakdown. Avoid attempting to repair it yourself.
- 10. While getting the components replaced, you are required to confirm with the repairman that he is using the substitute components specified by the manufacturer. Unauthorized component replacement might cause fire, electric shocks or other dangers.

Catalog


1.Product Overview	1
2.Packing List	2
3.Installing Driver	2
4.Tablet Connection	3
5.Replacing the Nibs	4
6.Specifications	4
7.Driver Settings	5

1. Product Overview

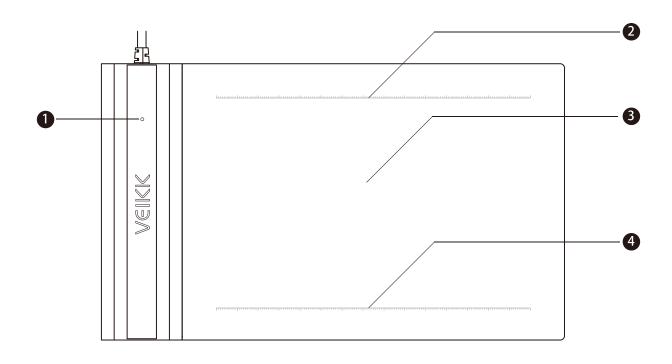


1 LED Indicator 2 Upper Marking Line 3 Working Area 4 Lower Marking Line

Pen



Note: The passive pen requires neither battery nor charging.

2. Item List

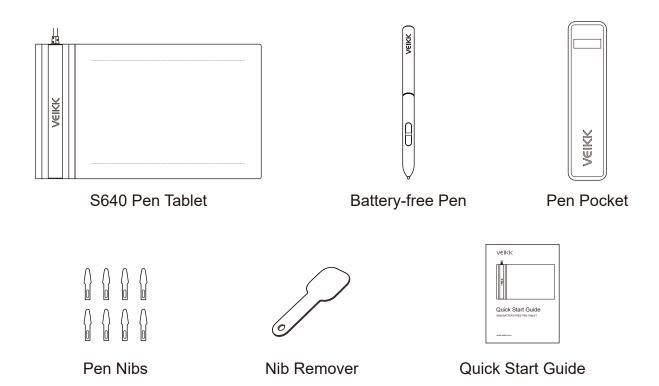

3. Driver Installation

3.1 OS Support

Windows 7 (or later), Mac OS 10.12 (or later), Chrome OS 88 (or later), Android 6.0 (or later, except Samsung Android devices), Linux

3.2 Installation

Mac OS, Windows And Linux OS Computer:

- 1. Before installing the driver, please uninstall all tablet drivers from your computer and keep all antivirus programs and the drawing software closed.
- 2. Connect the tablet to your computer before installation (Please refer to 4. Tablet Connection on page 3).
- 3. Please download the driver from www.veikk.com.
- 4. Click Set up.exe and follow onscreen instructions.
- 5. Restart your computer after installation.


Chrome OS Computer And Android Devices:

No need to install Veikk driver on Chrome OS computers and Android devices.

4. Tablet Connection

Mac OS, Windows and Linux OS Computer:

- 1. Connect the tablet to your computer.
- 2. Open the driver interface. If the product model appears in the upper-left corner, it indicates a successful connection. You can now begin using your tablet.

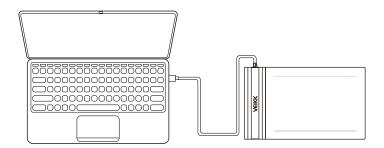


Chrome OS Computer:

Connect your tablet to Chrome OS computer, no need to install driver and youcan begin using it.

Note: The shortcut keys of the pen and the tablet can not work on Chrome OS computers.

Android Mobile Phone:

- 1. Please connect the tablet to your phone with the OTG adapter.
- 2. Rotate the tablet as shown in Figure 1, then you can start using your tablet.

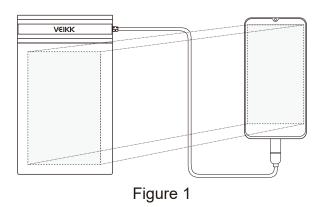


Note 1: The tablet works in mobile phone vertical screen mode only.

Note 2: For some mobile phones, you need to enable the OTG function manually in the phone's settings.


Note 3: The shortcut keys of the pen and tablet do not work on Android mobile phone.

5. Nibs Replacement


When the pen nib is heavily worn, please replace the nib with the nib remover.

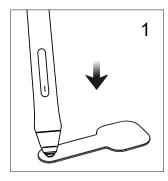


1.Insert the pen nib into the nib remover

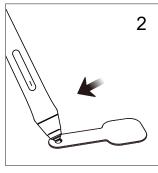

2.Tilt the pen so that the nib remover can fully catch the pen nib

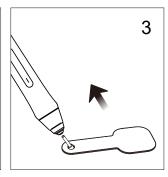

3.Pull out the nib

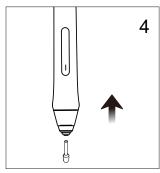

4.Insert a new nib into the pen and push it straightly until it stops


6. Specifications

Model	S640
Dimension	218 x 130 x 2 mm
Working Area	6 x 4 inch
Pressure Sensitivity	8192 levels
Resolution	5080 LPI
Reading Height	10 mm

7. Driver Settings


Windows

7.1 Pen

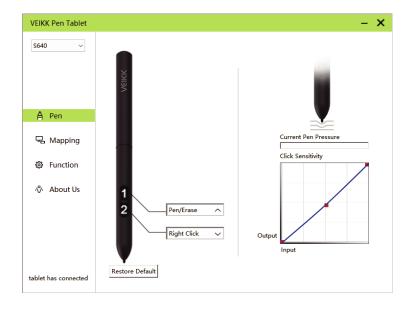

7.1.1 Pen Function Settings

Use the "Pen" option to customize shortcuts.

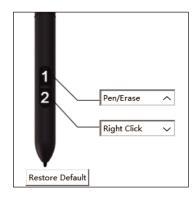


7.1.2 Current Pen Pressure

Current Pen Pressure shows the current pressure level being exerted on your tablet and can be used to test pen pressure.




7.1.3 Click Sensitivity

You can adjust the pen pressure sensitivity to "Output" or "Input" here.

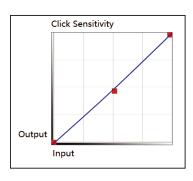


7.2 Mapping

Define the tablet area that will be mapped to the screen area.

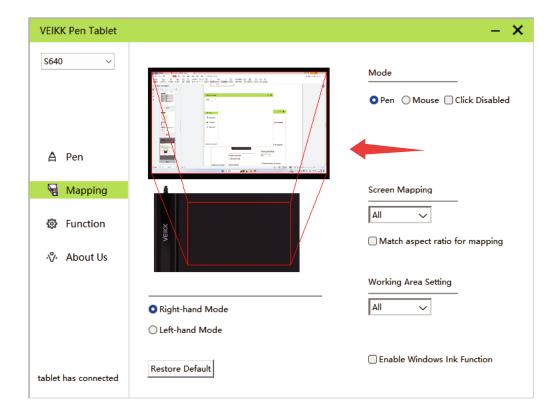


7.2.1 Screen Mapping


All Area: the entire working area of the tablet. This is the default setting.

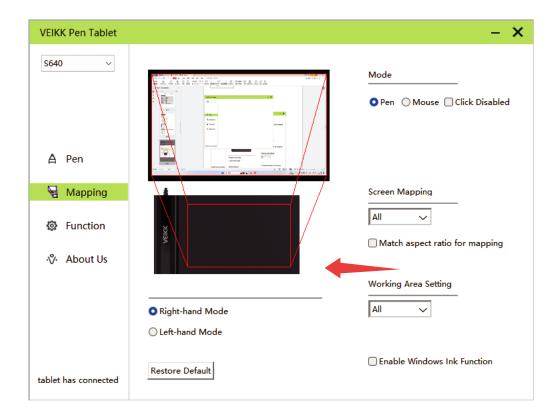


Part Area: Click Part

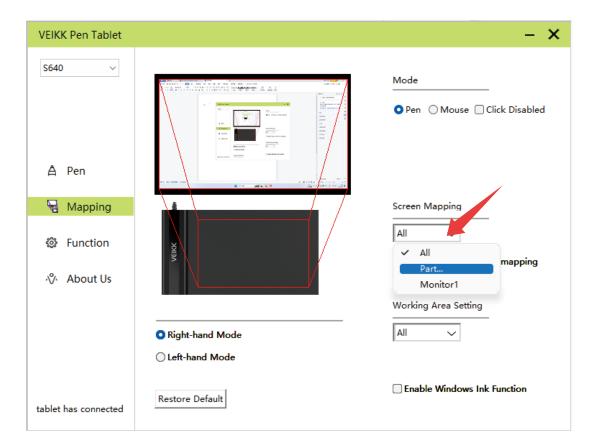

Then go to the next page, select one of the following three ways to define the screen range.

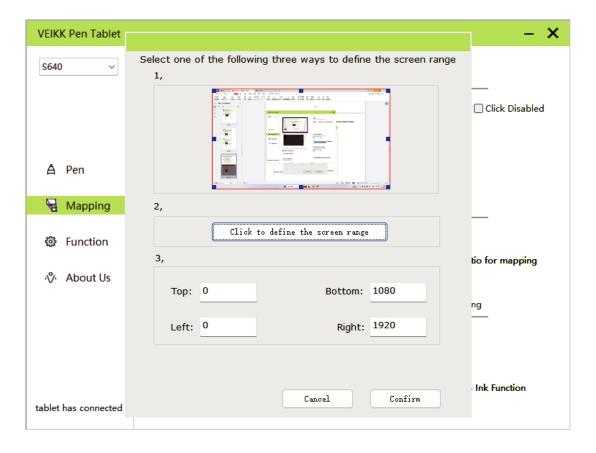


Monitor 1: When using more than one monitor in extended mode, select the corresponding monitor in the driver interface for mapping. In mirror mode (where all monitors display the same content), the tablet maps to the entire space on each monitor, and the screen cursor is simultaneously displayed on each monitor.

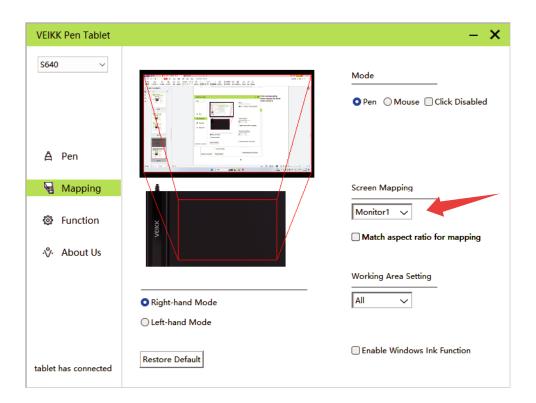


7.2.2 Working Area

All Area: the entire working area of the tablet. This is the default setting.

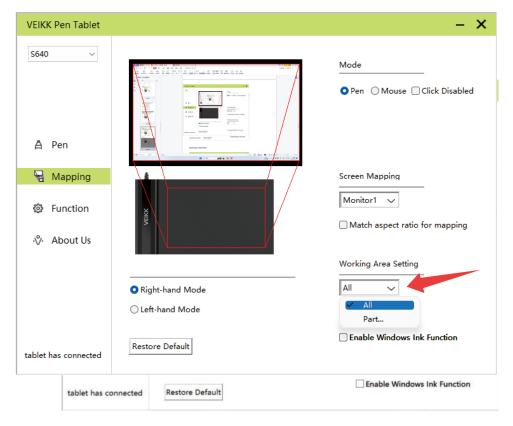

Part Area: Click Part

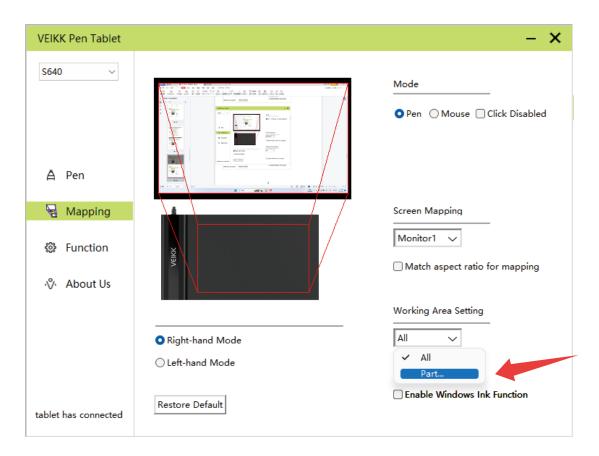


Then go to the next page, select one of the following three ways to define the working range.



7.2.3 Enable Windows Ink Function

This capability can be toggled on and off here. Enabling this will allow support for Windows Ink and applications that run using Windows Ink.

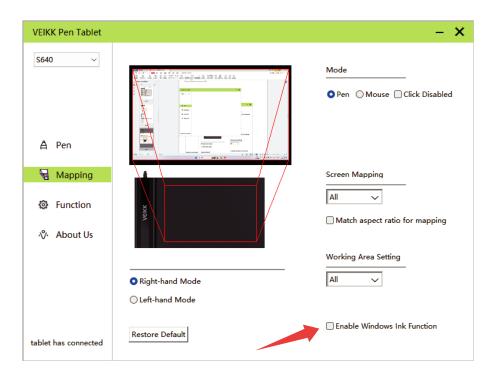



7.3. About Us

Diagnostic Tool: Check for missing key files.

Import & Export Configuration:

Retrieve or Store set values using Import and Export Configuration.

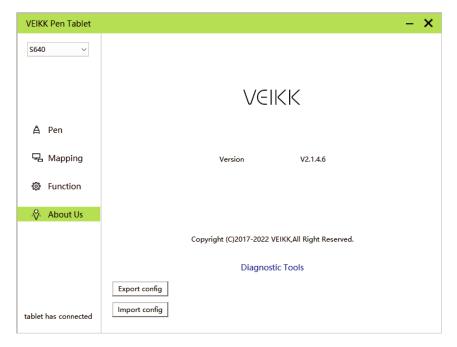

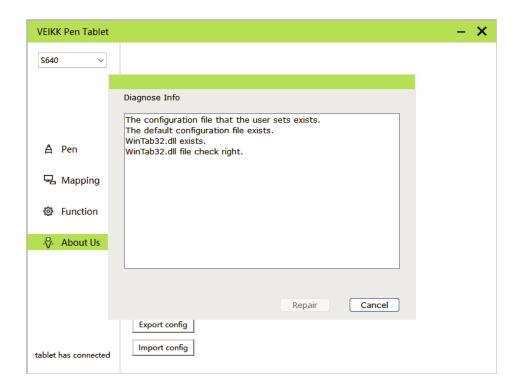

Mac:

Note:Driver settings in Mac system are the same as in Windows system. Mac users can refer to Windows system.



Any question, please contact us

Beijing Veikk E-commerce Co., Ltd.

Email: service@veikk.com
Website: www.veikk.com